



FD08 Roof Skylight Detail

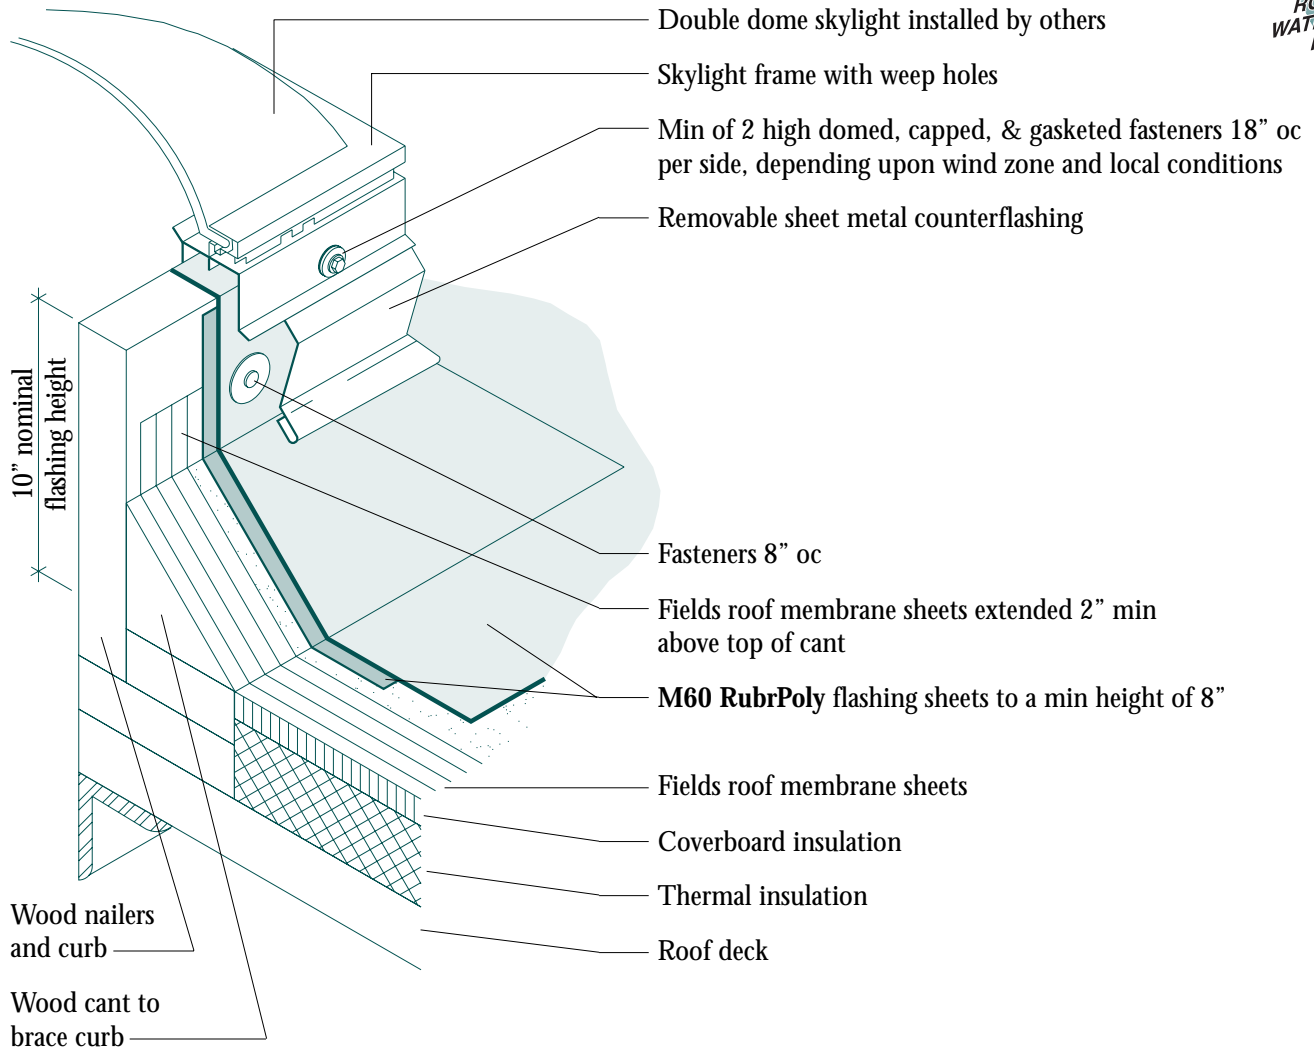

Side View

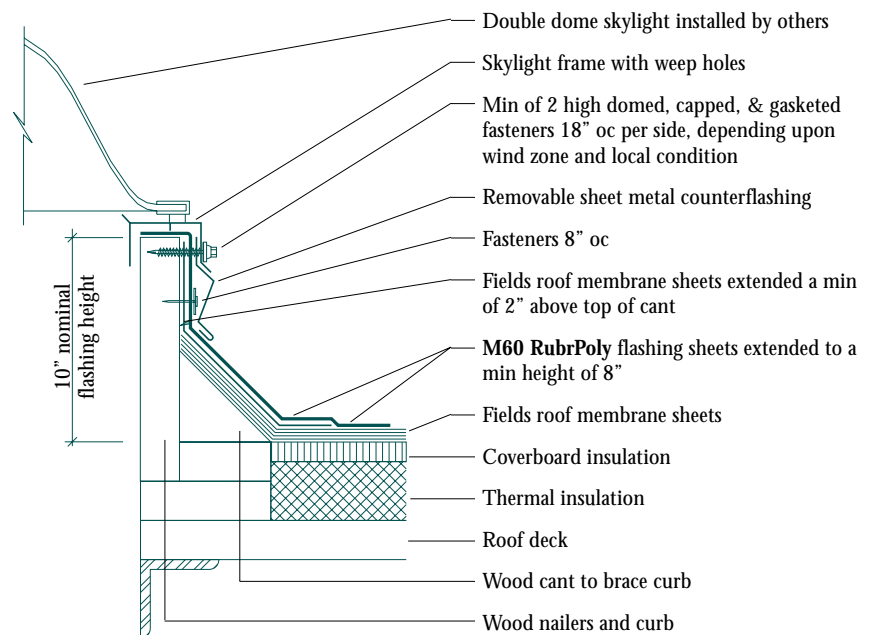

Note

1. Attach treated wood nailer to deck with suitable fasteners.