


FD17 Raised Metal Roof Edge Detail

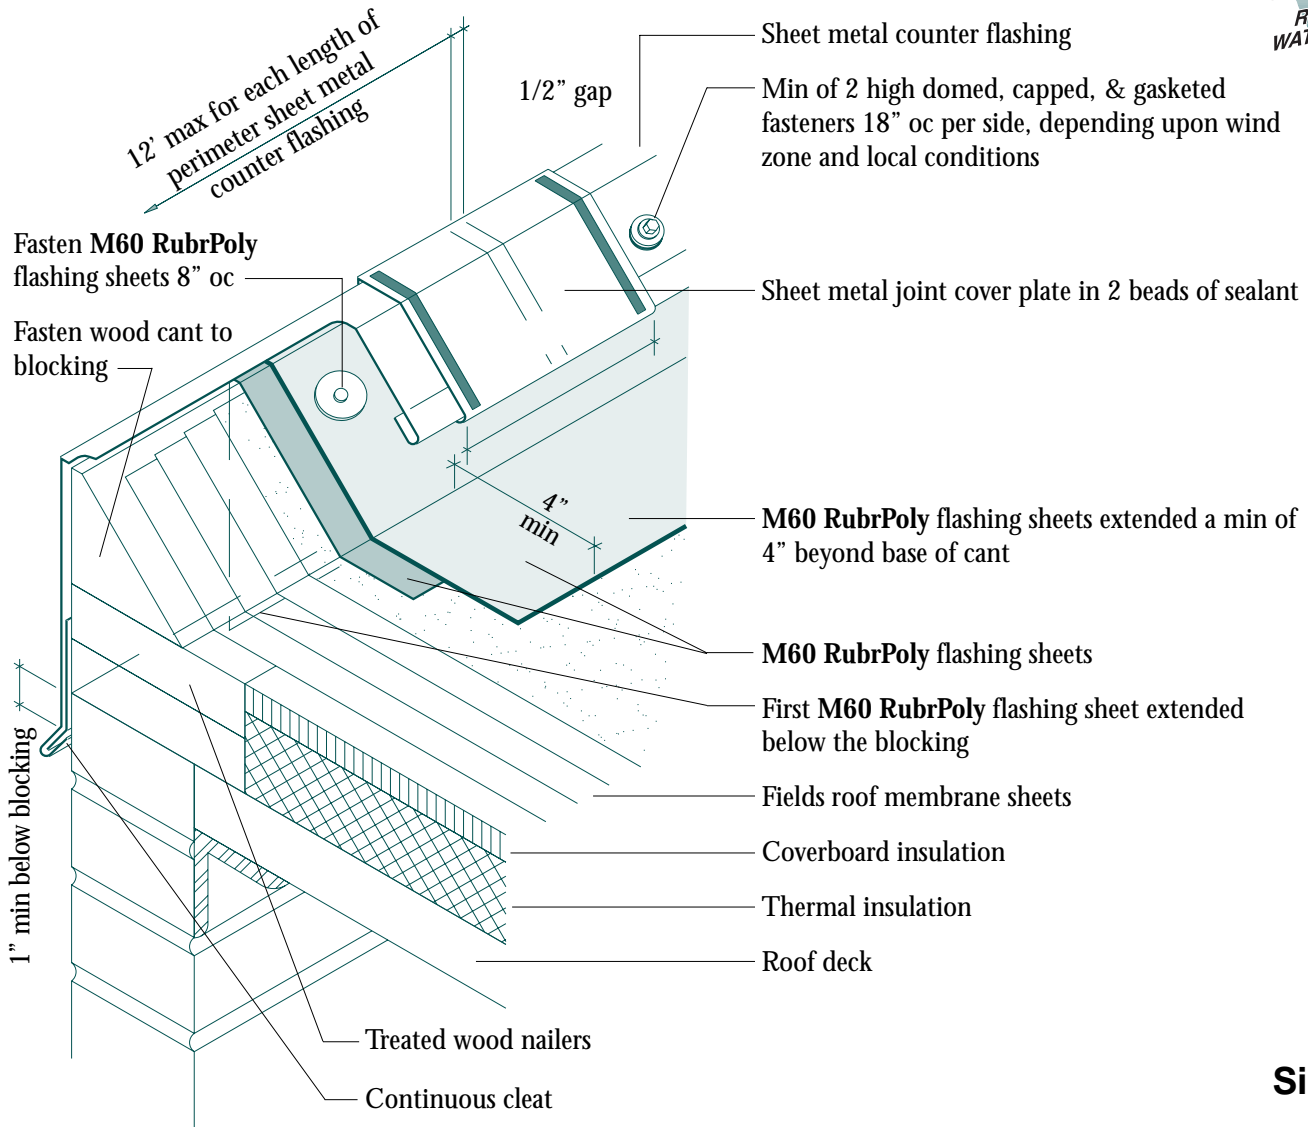

Side View

Notes

1. Attach the treated wood nailers to the wall or deck with suitable fasteners.
2. Wood blocking shall be slotted for venting wet filled decks.
3. This detail shall be installed only where the deck is supported by the outside wall.

